



HEATED WASHER JET FITTING INSTRUCTIONS MGF, MG TF, MG ZR (BGF1014)

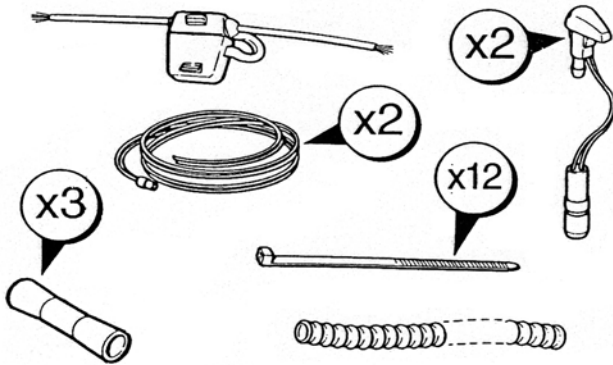


Kit contents

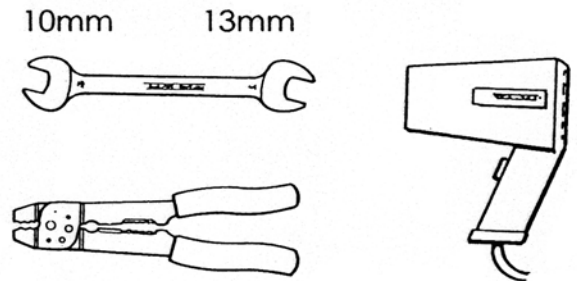



You will need

1. Open the bonnet.
2. Disconnect the Battery (negative lead first.)
3. Remove the washer jet tubing from the washer jets

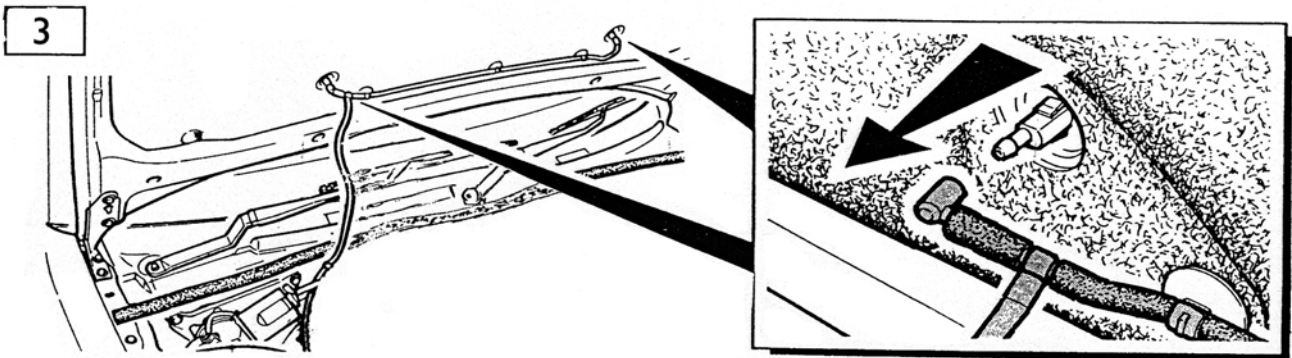


4. Carefully unclip the original washer jets and discard.

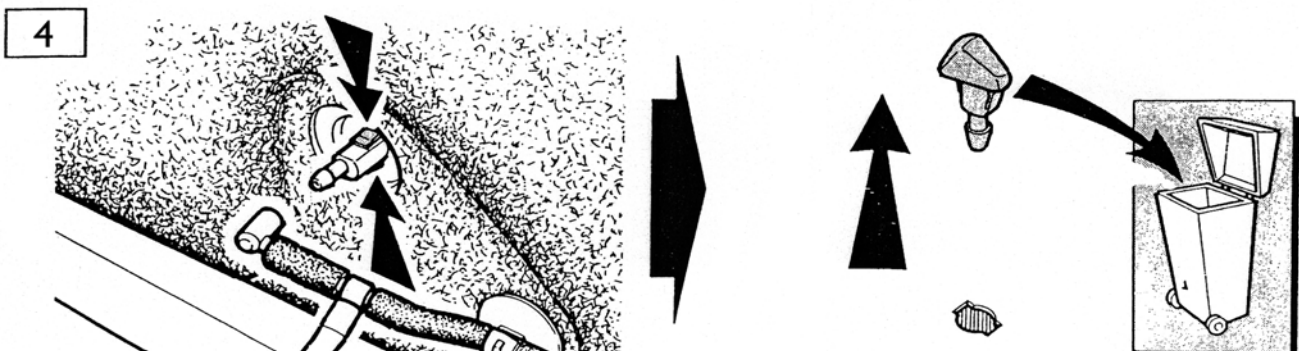


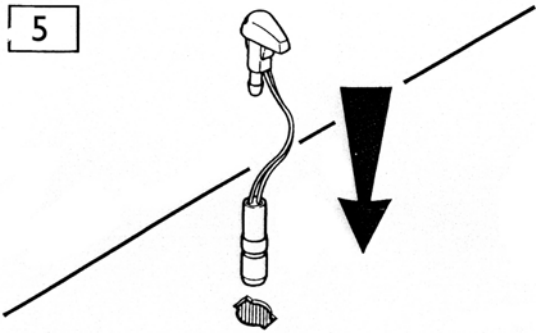


5. Feed New washer Jets into the bonnet.

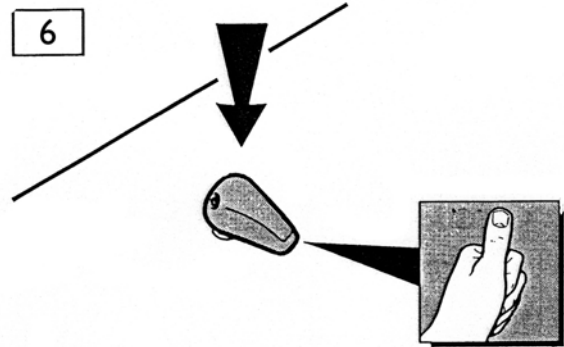


6. Push down on the washer jet to make sure it is clipped into place

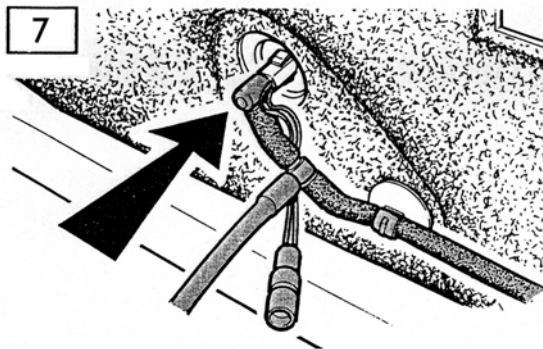

7. Push washer jet tubing onto the new jets

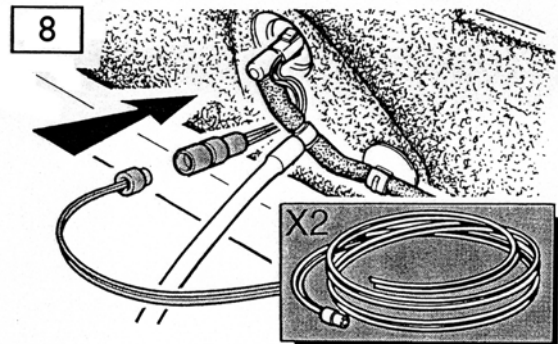



8. Carefully connect the wiring loom into the washer jets, making sure the electrical contacts line up properly

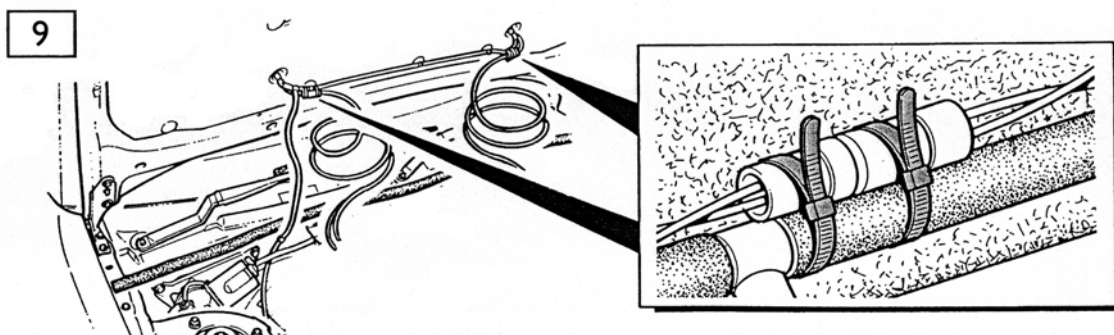

9. Secure the wiring to the washer tubing using the supplied tie-wraps. Do not over tighten as this will crush the tubing and prevent the washers from functioning.



10. Run the wiring down the washer jet tubing.

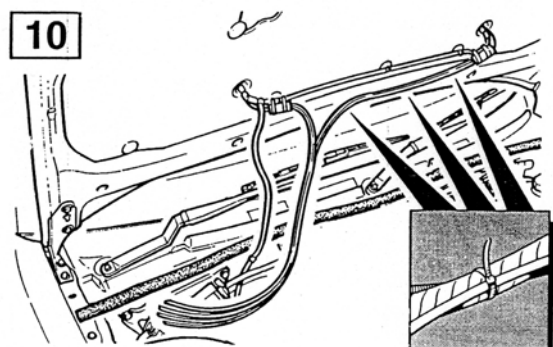

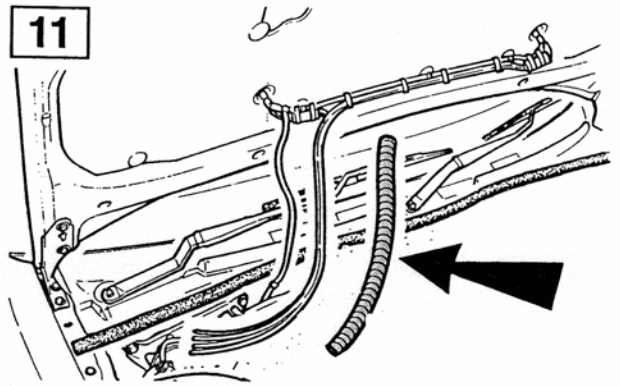


12b

- (GB) Right Hand Drive
- (D) Fahrzeug mit Rechtslenkung
- (F) Conduite à droite
- (I) Guida a destra
- (E) Dirección a la derecha
- (P) Para Veículos com Direção do lado Direito

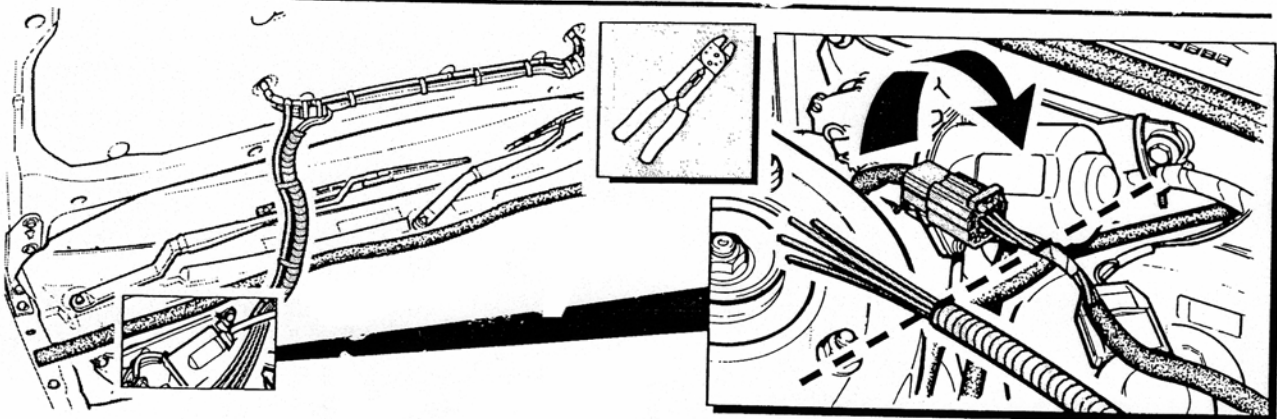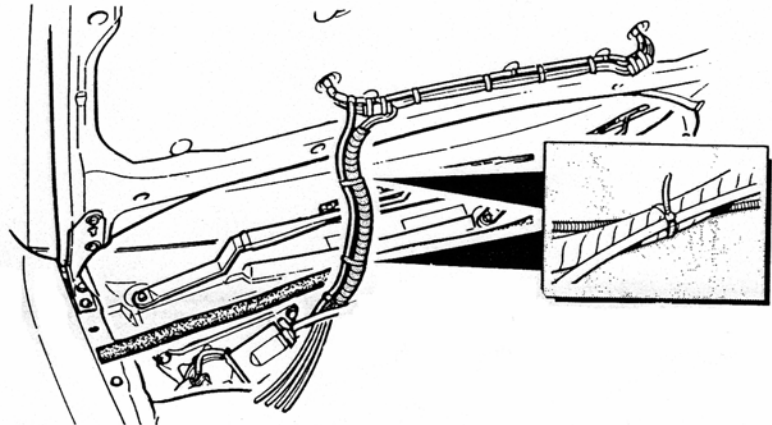


13

- (GB) Green/Grey
- (F) Vert/Gris
- (I) Ver/Grigio
- (E) Verde/Gris
- (D) Grün/Grau
- (P) Verde/Cinzeno

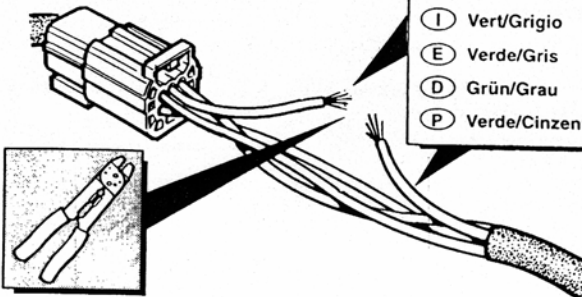


14

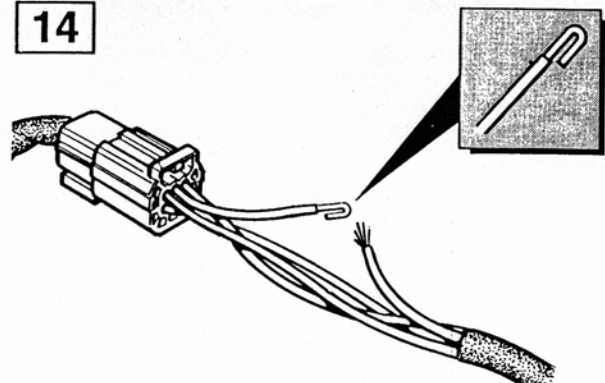


15

- (GB) Green/Grey
- (F) Vert/Gris
- (I) Vert/Grigio
- (E) Verde/Gris
- (D) Grün/Grau
- (P) Verde/Cinzento

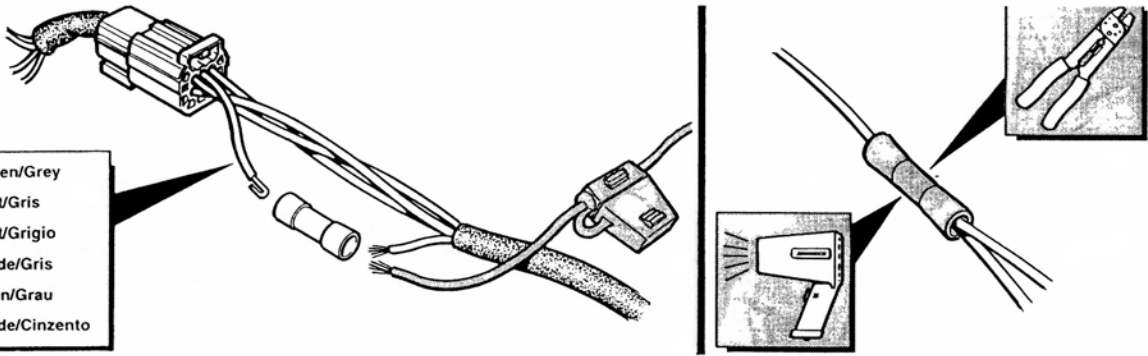


16

- (GB) Red
- (F) Rouge
- (I) Rosse
- (E) Rojo
- (D) Rot
- (P) Vermelho

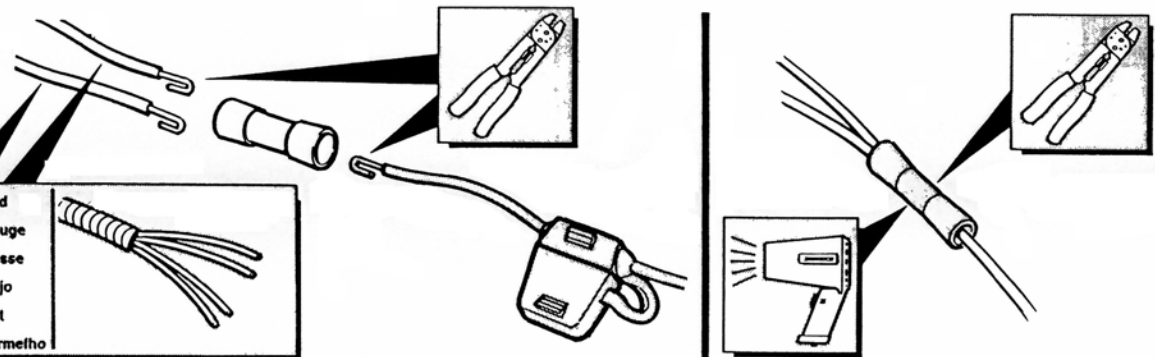

17

- (GB) Black
- (F) Noir
- (I) Nero
- (E) Negro
- (D) Schwarz
- (P) Preto

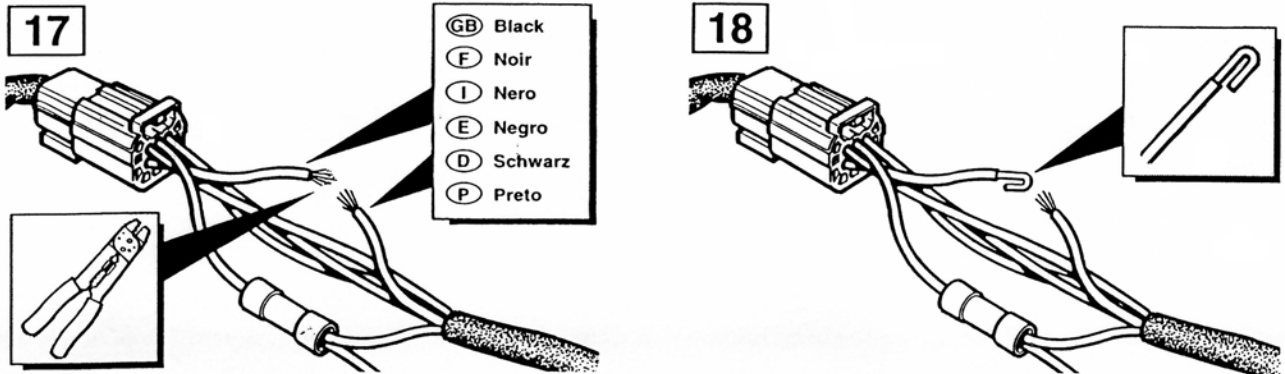

18

19

- (GB) Black
- (F) Noir
- (I) Nero
- (E) Negro
- (D) Schwarz
- (P) Preto

